


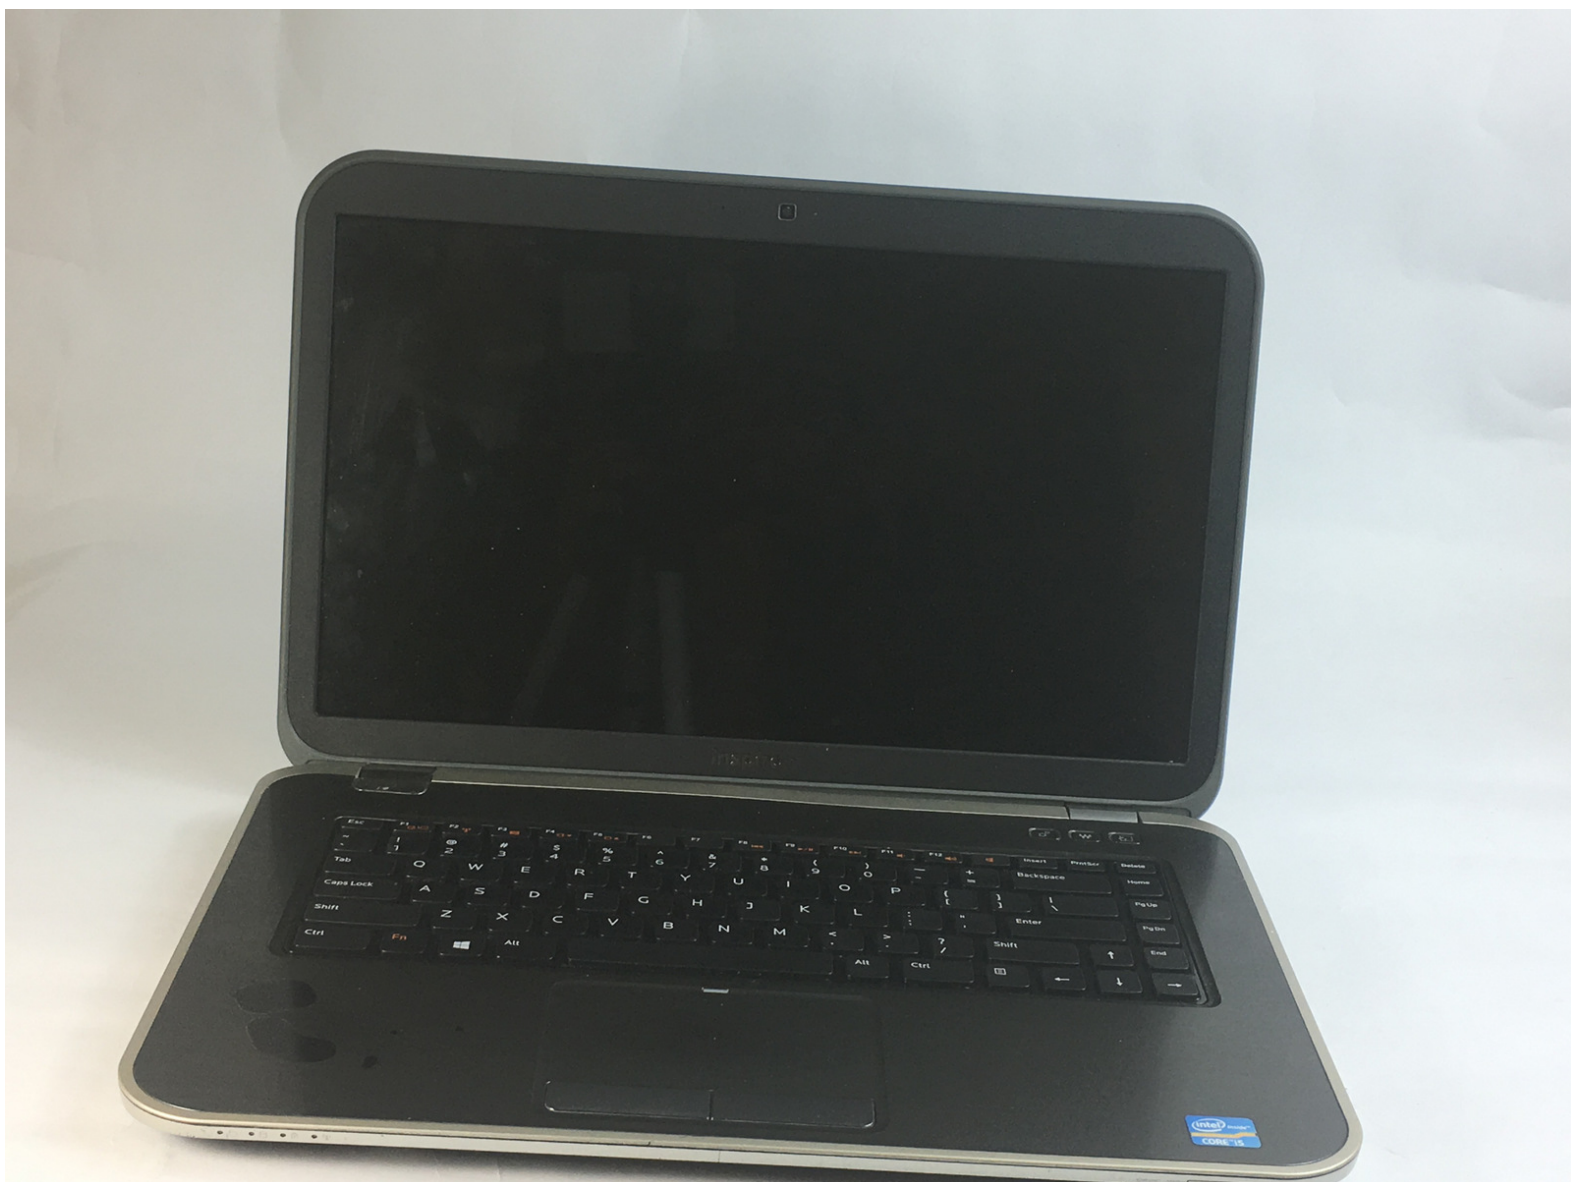

Dell Inspiron 15R 5520 Display Replacement

An easy guide on how to replace the display

Written By: zAj



INTRODUCTION


This replacement guide will demonstrate how to safely remove and replace the Inspiron 15R 5520 display screen.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-


Step 1 — Battery

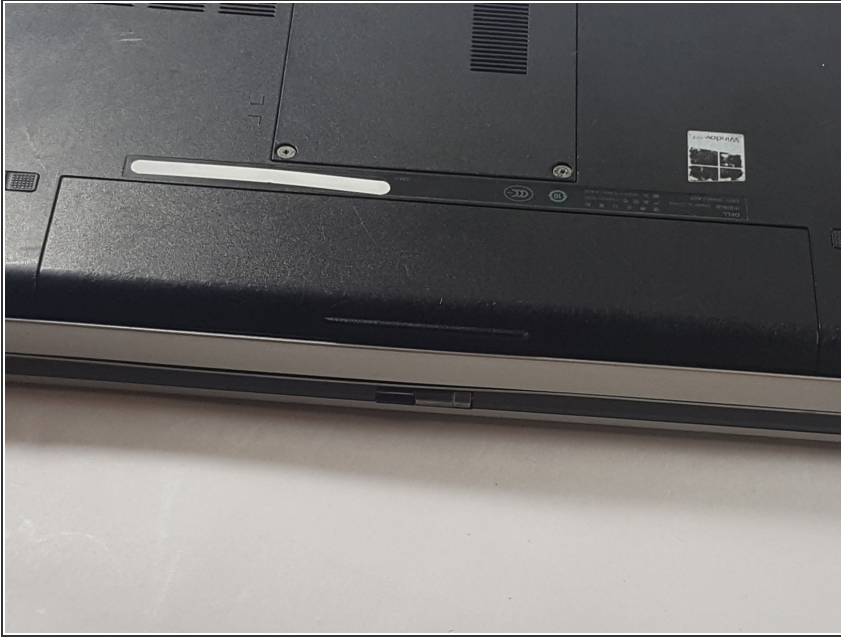

⚠ We are removing the battery to avoid the possibility of an electrical discharge when working with this system.


- Flip device on its back displaying the battery.

Step 2

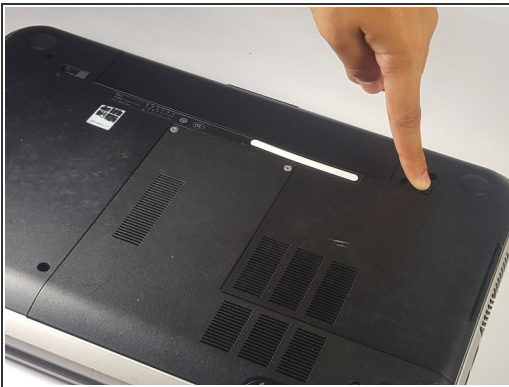

- Place a finger on both latches and push outwards.
- Grab by the lip and pull upwards to remove battery.

Step 3 — Display

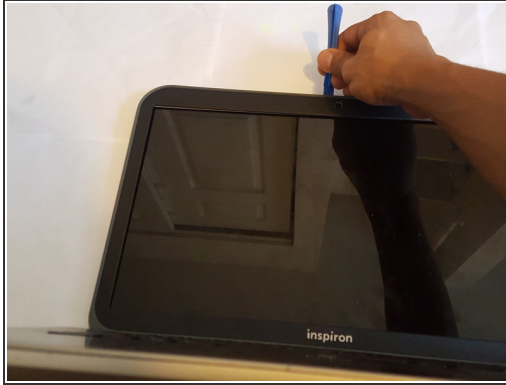

- Lay the device as shown on table.
- Use the plastic opening tool to separate the plastic casing on all sides.

Step 4



- Remove casing for screen.

Step 5




- Locate and remove the top two 4mm screws.

Step 6




- Locate and remove the three 3mm left hand side screws.

Step 7

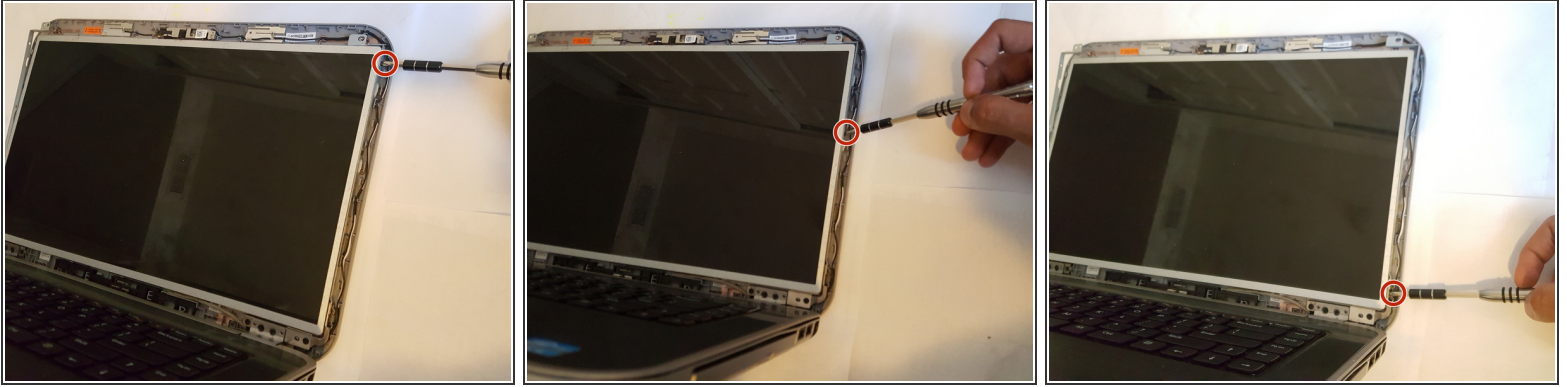


- Locate and remove the three 3mm right hand side screws.

Step 8

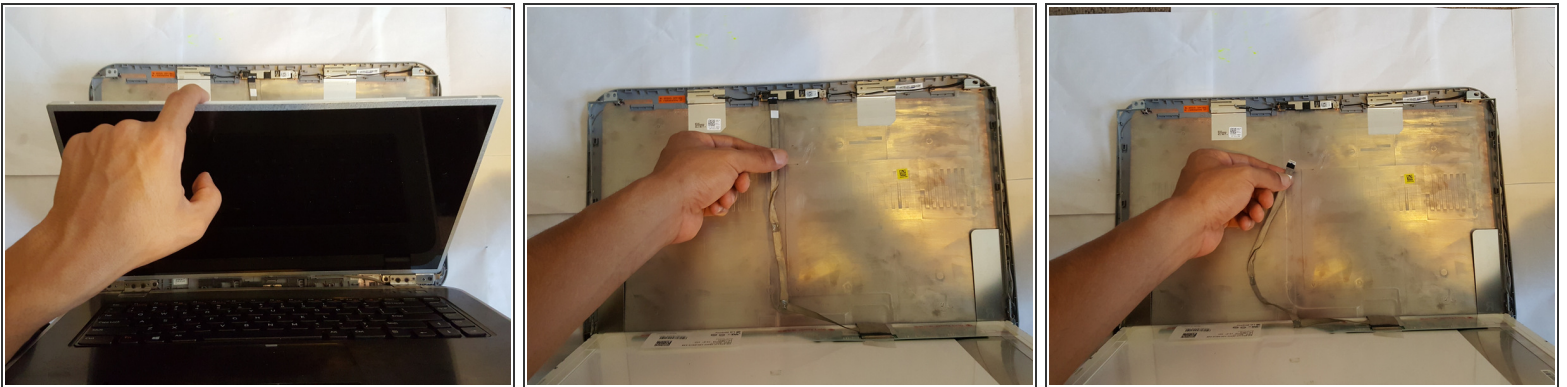

- Lift the display up to reveal the cable behind it.
- Pull the cable straight down.

Step 9

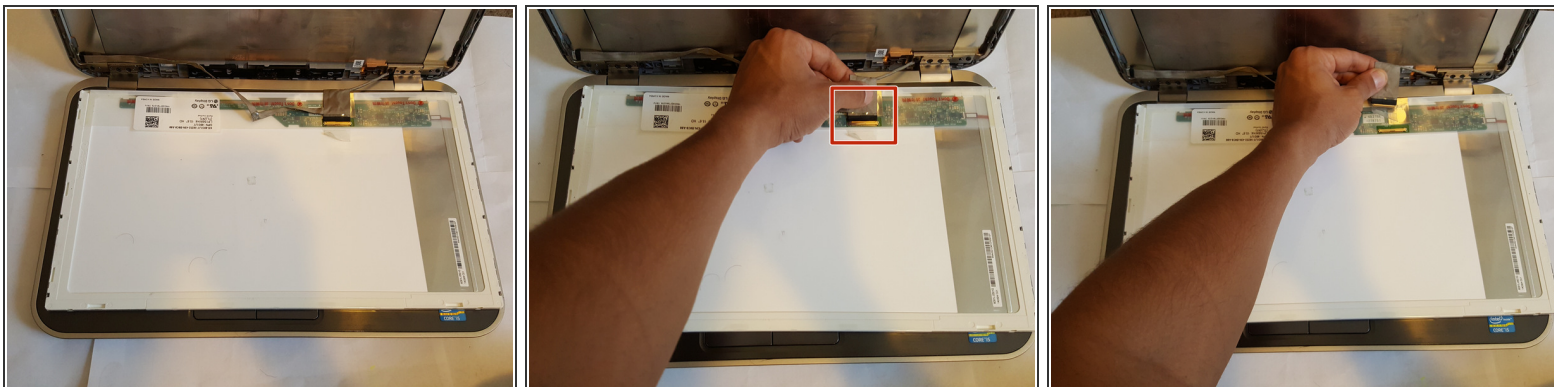

- Sit the device upright and lay the display down on the keyboard.
- Locate the cable on the base of the display.
- Pull gently away from yourself.

Step 10



- Remove screen.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-08-29 06:32:00 AM.